



BOBBI | LONDON

Power Bank - BL-IN1003/4



Product Guide



SPECIFICATION:

Product Model	BL-IN1003/4	Dimension	88 x 58 x 4 mm
Capacity	1,500 mAh	Weight	55 g
Input	5V / 1.0A	Operating Temperature	-10°C to -45°C
Output	5V / 1.0A		
Charging time	2.5hrs (2A)		

Contents & Product Details

- Power Bank - BL-IN1003/4
- Product Guide
- Micro-USB Cable



OPERATION:

User Guide

1. To charge your device, use the built-in black cable from the power bank.
2. Power bank charging and LED indicators: A red blinking indicator is displayed during the charging of the power bank. Once the power bank is fully charged the blinking red light will become solid. A blue indicator is displayed during charging of devices. If the blue indicator is off this means the power bank is out of electricity, and needs to be re-charged.
3. When charging the power bank please use a micro-USB cable connected to a standard charger. The power bank only takes 2.5hrs to charge fully when using an output current of 2A.
4. Regarding the power bank discharge and overheat; As the power bank has limited heat dissipation space, the motherboard will produce a lot of heat during the power conversion. This is expected behaviour, and no need to be alarmed or concerned about this.
5. As this power bank has limited power energy, it will deliver a sufficient charge to devices not requiring a heavy input of power. However, it will only be suitable for emergency situations when charging mobile phones.

Attention

1. This power bank is made of high quality polymer lithium battery.
2. If the power bank smells burnt, becomes extremely hot, shape deforms or other abnormal situation occurs, please stop using it and contact the seller if it is still under warranty.
3. Do not disassemble, strike or throw the power bank, improper use may reduce battery life and invalidate the warranty.



PRODUCT WARRANTY:

This product is covered by a 30 days product replacement and a 12-month warranty service should the product develop a fault.

Warranty Invalid Circumstances

1. Product damaged by improper use.
2. Product damaged by force majeure like flooding, natural disasters, etc.
3. Accessories misused or damaged.
4. Replacement and Warranty overdue.

Customer Care

For any questions, support or warranty claims, you may contact us using our email address: customer@bobbildn.com.

Alternatively, please submit a Request for Return form via our website: www.bobbildn.com.



BOBBI | LONDON

WWW.BOBBILDN.COM