



BOBBI | LONDON

Power Bank - BL-IN1020



Product Guide




## SPECIFICATION:

Product Model	BL-IN1020	Capacity	10,000 mAh
Charging Time	6-7hrs (5V)	Rated Energy	30 wh
Dimension (mm)	82 x 82 x15	Input /Output (Type-C)	5-12v (Max 18W)
Weight	160 g	Output	USB-A 5v/2.1a 5v/2.4a, 9v/2.0a 12v /1.5a
Operating Temp	-10°C to 45°C		

## Contents & Product Details:

- Power Bank - BL-IN1020
- Product Guide
- Micro-USB Cable
- Leather Carry Pouch

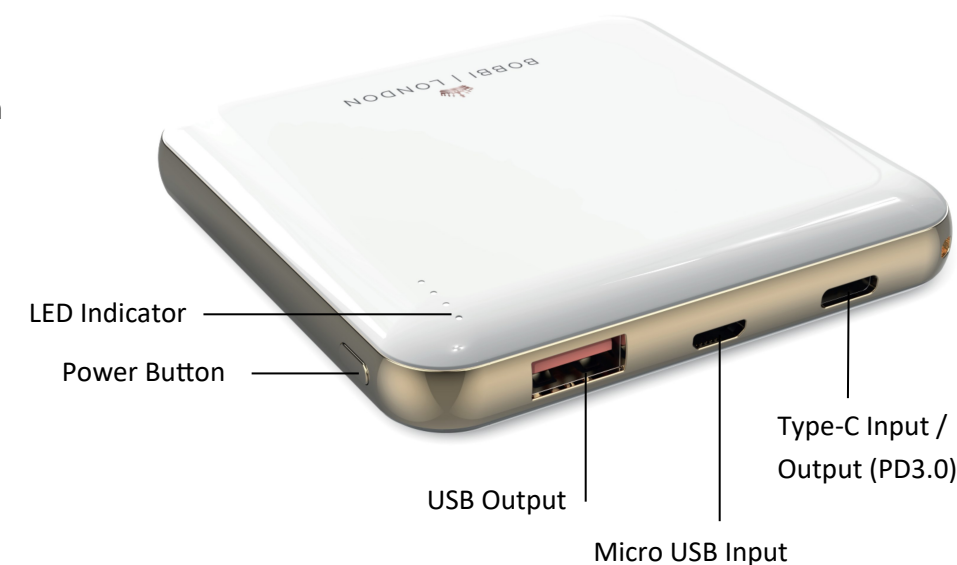



## OPERATION:

### LED Status

Press the power button briefly to confirm the power level, the power bank will automatically turn off after 30 seconds.

### Charging the Power Bank

1. Connect a micro-USB / Type-C cable with the power bank.
2. Connect the micro-USB / Type-C cable with a USB wall charger, or a sufficiently powered USB power adapter.

### Charge Devices

1. Connect your device with the power bank via a USB / Type-C cable.
2. Confirm the connected device is in charge mode.

### Attention

1. Use 5V or QC output adapters to charge the Power Bank.
2. Check if the charging sources for the Power Bank are allowed.
3. If the power bank smells burnt, becomes extremely hot, shape deforms or other abnormal situation occurs, please stop using it and contact the seller if it is still under warranty.
4. Keep the power bank in a dry, clean environment and remain around 50% power storage, if you do not intend to use it for a long period.
5. Unplug the power bank and devices after you have finished charging.
6. Do not disassemble, strike or throw the power bank, improper use may reduce battery life and invalidate the warranty.



## PRODUCT WARRANTY:

Thank you for purchasing the Bobbi | London™ - Power Bank, this product is covered by a 30 days product replacement and a 12-month warranty service should the product develop a fault.

Please register your product via our website: [www.bobbildn.com/warranty-registration](http://www.bobbildn.com/warranty-registration)

### Warranty Invalid Circumstances

1. Product damaged by improper use.
2. Product damaged by force majeure like flooding, natural disasters, etc.
3. Accessories misused or damaged.
4. Replacement and Warranty overdue.

### Customer Care

For any questions, support or warranty claims, you may contact us using our email address: [customercare@bobbildn.com](mailto:customercare@bobbildn.com).

Alternatively, please submit a Request for Return form via our website: [www.bobbildn.com](http://www.bobbildn.com)



BOBBI | LONDON

WWW.BOBBILDN.COM